

1,000km 600miles

1,000km

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Inspect drive belts (Diesel engine or gasoline engine without catalyst) See NOTE (1)	✓	✓
GASOLINE ENGINE	Inspect torque of manifolds & exhaust tube nuts (& carburetor fixing nuts) (Without catalyst)	✓	✓
	Inspect carburetor idle rpm & mixture ratio (For no emission regulations)	✓	✓
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engine)	✓	✓
	Inspect torque of manifolds & exhaust tube nuts	✓	✓
	Inspect idling speed (Except YD & ZD engine)	✓	✓
LPG ENGINE	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect Steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft See NOTE (4)	✓	G,H
4WD MODEL AND COMMERCIAL VEHICLE	Tighten body mountings (D22, Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed model only) and body mountings	✓	✓

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

5,000km 3,000miles / 3months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

10,000km

6,000miles / 6months

6Months

10,000km

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace engine oil at 5,000km/6months (For VQ turbocharged engine) See NOTE (3)		A,B,C,D
	Replace engine oil filter at 5,000km/6months (For VQ turbocharged engine) See NOTE (3)		A,B,C,D
	Inspect spark plugs (Conventional type without catalyst)	✓	✓
	Inspect distributor breaker point (L28S engine)	✓	✓
	Inspect carburetor idle rpm & mixture ratio See NOTE (2)	✓	✓
	Adjust ignition timing (No emission controlled engine) (Carburetor models)	✓	✓
DIESEL ENGINE	Replace engine oil (Except for D22, 2WD models with YD engine)	✓	A,B,C,D
	Replace engine oil (For D22, 2WD models with YD engine)		A,B,C,D
	Replace engine oil (For D22, 4WD or 4WD appearance 2WD models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD or ZD engine) See NOTE (5)		A,B,C,D
	Inspect engine oil level (For D22 models with YD or ZD engine)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page 

M-9

10,000km 6,000miles / 6months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)	✓	G
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Australia models)		G
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation) (Except for Australia models)	✓	✓
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

15,000km

9,000miles / 9months

9Months

15,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

20,000km 12,000miles / 12months

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Inspect cooling system	✓	✓
	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Inspect drive belts (Except gasoline engine models with catalyst) See NOTE (1)	✓	✓
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace fuel filter (Except in-tank type filter)		A,E
GASOLINE ENGINE	Adjust intake & exhaust valve clearance (Without catalyst, or TB engine except TB48DE)	✓	✓
	Replace engine oil at 10,000km/12months (For VQ turbocharged engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter at 10,000km/12months (For VQ turbocharged engine) See NOTE (3)	✓	A,B,C,D
	Inspect positive crankcase ventilation (PCV) system (Without catalyst)	✓	✓
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Inspect automatic temperature control air cleaner (Carburetor models)	✓	✓
	Replace spark plugs (Conventional type without catalyst, for leaded fuel)	✓	✓
	Inspect spark plugs (Conventional type without catalyst, for unleaded fuel)	✓	✓
	Replace distributor breaker point (L28S engine)	✓	✓
	Adjust ignition timing (Carburetor models)	✓	✓
	Inspect vacuum hoses & connections (Without catalyst)	✓	✓
	Inspect EGR control system (Without catalyst)	✓	✓
	Inspect carburetor idle rpm & mixture ratio See NOTE (2)	✓	✓
	Replace air induction valve filter		A

		Normal	Severe
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engine)	✓	✓
	Replace engine oil	✓	A,B,C,D
	Replace engine oil filter	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	
	Replace fuel filter & drain water		A,E
	Inspect idling speed (Except YD & ZD engine)	✓	✓
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Adjust intake & exhaust valve clearance (Without catalyst, Except NA20P engine)	✓	✓
	Inspect drive belts (Taxi use)	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently.)	✓	✓
	Adjust ignition timing	✓	✓
	Inspect vacuum hoses & connections	✓	✓
	Inspect EGR control system	✓	✓

20,000km

12,000miles / 12months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Inspect free-running hub grease	✓	J
	Inspect limited-slip differential (LSD) gear oil (For level & leaks)	✓	
	Replace limited-slip differential (LSD) gear oil		C,H
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks)	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Replace N-CVT fluid		C,H
	Inspect Hyper-CVT fluid (For level & leaks) See NOTE (10)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Lubricate locks, hinges & hood latch (& Side door rollers and links)	✓	G
	Replace brake fluid		F
	Replace ventilation air filter	✓	A
Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft	✓	G,H	
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H

		Normal	Severe
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect all mode 4WD transfer fluid & differential gear oil (Except LSD) (For level & leaks)	✓	✓
	Inspect front wheel bearing grease (4WD models)	✓	J
	Inspect steering damper (Commercial vehicles)	✓	✓
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)	✓	G,H,J
	Tighten body mountings (D22, Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed model only) and body mountings	✓	✓

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

25,000km

15,000miles / 15months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

30,000km

18,000miles / 18months

18Months

30,000km

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace engine oil at 15,000km/18months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Replace engine oil filter at 15,000km/18months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Inspect spark plugs (Conventional type without catalyst)	✓	✓
	Inspect distributor breaker point (L28S engine)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Adjust ignition timing (No emission controlled engine) (Carburetor models)	✓	✓
DIESEL ENGINE	Replace engine oil (Except for D22, 2WD models with YD engine)	✓	A,B,C,D
	Replace engine oil (For D22, 2WD models with YD engine)		A,B,C,D
	Replace engine oil (For D22, 4WD or 4WD appearance 2WD models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD or ZD engine)	See NOTE (5)	A,B,C,D
	Inspect engine oil level (For D22 models with YD or ZD engine)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page 

M-17

30,000km

18,000miles / 18months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)	✓	G
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Australia models)		G
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation) (Except for Australia models)	✓	✓
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

35,000km

21,000miles / 21 months

21Months

35,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

40,000km

24,000miles / 24months

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Inspect cooling system	✓	✓
	Inspect drive belts	See NOTE (1)	✓
	Check and correct the engine coolant mixture ratio	See NOTE (6)	✓
	Inspect fuel lines (Except LPG engine)	✓	✓
	Inspect heated oxygen sensor (Exhaust gas sensor)(Except diesel engine)	✓	✓
	Inspect ignition wires (Except diesel engine)	✓	✓
	Replace air cleaner filter	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD engine)	✓	A,B,C,D
GASOLINE ENGINE	Adjust intake & exhaust valve clearance (Without catalyst, or TB engine except TB48DE)	✓	✓
	Inspect automatic temperature control air cleaner (Carburetor models)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace fuel filter (Except in-tank type fuel filter)	✓	A,E
	Inspect electrical fuel pump filter (L28 engine)	✓	✓
	Adjust ignition timing (Carburetor models)	✓	✓
	Inspect vacuum hoses & connections (Without catalyst)	✓	✓
	Inspect EGR control system (Without catalyst)	✓	✓
	Inspect EVAP vapor lines (With carbon canister)	✓	✓
	Replace engine oil at 20,000km/24months (For VQ turbocharged engine)	See NOTE (3)	✓
	Replace engine oil filter at 20,000km/24months (For VQ turbocharged engine)	See NOTE (3)	✓

		Normal	Severe
GASOLINE ENGINE	Inspect positive crankcase ventilation (PCV) system (VQ engine models & models without catalyst)	✓	✓
	Replace air induction valve filter	✓	A
	Replace PCV filter	✓	A
	Replace spark plugs(Conventional type only)	✓	✓
	Replace distributor breaker point (L28S engine)	✓	✓
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engine)	✓	✓
	Replace engine oil	✓	A,B,C,D
	Replace engine oil filter	✓	A,B,C,D
	Replace air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Replace fuel filter	✓	A,E
	Inspect idling speed (Except YD & ZD engine)	✓	✓
LPG ENGINE	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Adjust intake & exhaust valve clearance (Without catalyst, Except NA20P engine)	✓	✓
	Replace fuel filters	See NOTE (7)	A,E
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently.)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Replace spark plugs (Conventional type with catalyst)	✓	✓
	Inspect vacuum hoses & connections	✓	✓
	Inspect EGR control system	✓	✓

40,000km

24,000miles / 24months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Replace brake fluid	✓	F
	Inspect brake booster vacuum hoses, connections & check valve	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Replace N-CVT fluid	✓	C,H
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect N-CVT magnetic clutch carbon brushes	✓	✓
	Inspect Hyper-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks)	✓	✓
	Replace limited-slip differential (LSD) gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft	✓	G,H
	Inspect Automatic Speed Control Device(ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (if necessary, rotate & balance wheels)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect free-running hub grease	✓	J
	Lubricate locks, hinges & hood latch (& Side door rollers and links)	✓	G
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
Replace ventilation air filter	✓	A	

		Normal	Severe
ALL VEHICLES	Replace automatic transmission fluid		C,H
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	
	Replace differential gear oil & viscous type LSD gear oil		C,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Tighten body mountings (D22, Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed model only) and body mountings	✓	✓
	Lubricate axle joint in knuckle flange (For Y61 model)	✓	✓
	Replace transfer & differential gear oil (For level and leaks)	✓	✓
	Inspect all mode 4WD transfer fluid & differential gear oil (Except LSD) (For level & leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)	✓	G,H,J
	Replace front wheel bearing grease (4WD models)	✓	J
	Inspect front wheel bearing grease (4x2 models except E25 model)	✓	✓
	Inspect steering damper (Commercial vehicles)	✓	✓

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

45,000km

27,000miles / 27months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

50,000km

30,000miles / 30months

30Months

50,000km

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace engine oil at 25,000km/30months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Replace engine oil filter at 25,000km/30months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Inspect spark plugs (Conventional type without catalyst)	✓	✓
	Inspect distributor breaker point (L28S engine)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Adjust ignition timing (No emission controlled engine) (Carburetor models)	✓	✓
DIESEL ENGINE	Replace engine oil (Except for D22, 2WD models with YD engine)	✓	A,B,C,D
	Replace engine oil (For D22, 2WD models with YD engine)		A,B,C,D
	Replace engine oil (For D22, 4WD or 4WD appearance 2WD models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD or ZD engine)	See NOTE (5)	A,B,C,D
	Inspect engine oil level (For D22 models with YD or ZD engine)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page 

M-25

50,000km

30,000miles / 30months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)	✓	G
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Australia models)		G
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation) (Except for Australia models)	✓	✓
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

55,000km

33,000miles / 33months

33Months

55,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date	Mileage	Dealership Name	Service Advisor
------	---------	-----------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

60,000km

36,000miles / 36months

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Inspect cooling system	✓	✓
	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Inspect drive belts (Except gasoline engine models with catalyst) See NOTE (1)	✓	✓
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace fuel filter (Except in-tank type filter)		A,E
GASOLINE ENGINE	Adjust intake & exhaust valve clearance (Without catalyst, or TB engine except TB48DE)	✓	✓
	Replace engine oil at 30,000km/36months (For VQ turbocharged engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter at 30,000km/36months (For VQ turbocharged engine) See NOTE (3)	✓	A,B,C,D
	Inspect positive crankcase ventilation (PCV) system (Without catalyst)	✓	✓
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Inspect automatic temperature control air cleaner (Carburetor models)	✓	✓
	Replace spark plugs (Conventional type without catalyst, for leaded fuel)	✓	✓
	Inspect spark plugs (Conventional type without catalyst, for unleaded fuel)	✓	✓
	Replace distributor breaker point (L28S engine)	✓	✓
	Adjust ignition timing (Carburetor models)	✓	✓
	Inspect vacuum hoses & connections (Without catalyst)	✓	✓
	Inspect EGR control system (Without catalyst)	✓	✓
	Inspect carburetor idle rpm & mixture ratio See NOTE (2)	✓	✓
	Replace air induction valve filter		A

		Normal	Severe
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engine)	✓	✓
	Replace engine oil	✓	A,B,C,D
	Replace engine oil filter	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	
	Replace fuel filter & drain water		A,E
	Inspect idling speed (Except YD & ZD engine)	✓	✓
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Adjust intake & exhaust valve clearance (Without catalyst, Except NA20P engine)	✓	✓
	Inspect drive belts (Taxi use)	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently.)	✓	✓
	Adjust ignition timing	✓	✓
	Inspect vacuum hoses & connections	✓	✓
	Inspect EGR control system	✓	✓

60,000km

36,000miles / 36months

		Normal	Severe	
CHASSIS AND BODY MAINTENANCE				
ALL VEHICLES	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I	
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I	
	Inspect brake, clutch & exhaust systems	✓	✓	
	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓	
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓	
	Inspect free-running hub grease	✓	J	
	Inspect limited-slip differential (LSD) gear oil (For level & leaks)	✓		
	Replace limited-slip differential (LSD) gear oil		C,H	
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓	
	Inspect manual transmission gear oil (For level & leaks)	✓	✓	
	Inspect N-CVT fluid (For level & leaks)	✓	✓	
	Replace N-CVT fluid		C,H	
	Replace Hyper-CVT fluid at 60,000km (For level & leaks)	See NOTE (10)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓	
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓	
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓	
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓	
	Lubricate locks, hinges & hood latch (& Side door rollers and links)	✓	G	
	Replace brake fluid		F	
	Replace ventilation air filter	✓	A	
Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft	✓	G,H		
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H	

36Months

60,000km

		Normal	Severe
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect all mode 4WD transfer fluid & differential gear oil (Except LSD) (For level & leaks)	✓	✓
	Inspect front wheel bearing grease (4WD models)	✓	J
	Inspect steering damper (Commercial vehicles)	✓	✓
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)	✓	G,H,J
	Tighten body mountings (D22, Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed model only) and body mountings	✓	✓

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

65,000km

39,000miles / 39months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo			
------	--	--	--

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

70,000km

42,000miles / 42months

42Months

70,000km

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace engine oil at 35,000km/42months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Replace engine oil filter at 35,000km/42months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Inspect spark plugs (Conventional type without catalyst)	✓	✓
	Inspect distributor breaker point (L28S engine)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Adjust ignition timing (No emission controlled engine) (Carburetor models)	✓	✓
DIESEL ENGINE	Replace engine oil (Except for D22, 2WD models with YD engine)	✓	A,B,C,D
	Replace engine oil (For D22, 2WD models with YD engine)		A,B,C,D
	Replace engine oil (For D22, 4WD or 4WD appearance 2WD models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD or ZD engine)	See NOTE (5)	A,B,C,D
	Inspect engine oil level (For D22 models with YD or ZD engine)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page 

M-33

70,000km

42,000miles / 42months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)	✓	G
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Australia models)		G
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation) (Except for Australia models)	✓	✓
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

75,000km

45,000miles / 45months

45Months

75,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

80,000km

48,000miles / 48months

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Inspect cooling system	✓	✓
	Inspect drive belts	See NOTE (1)	✓
	Replace engine coolant (Use Nissan genuine engine coolant or equivalent in its quality)	See NOTE (6)	✓
	Inspect fuel lines (Except LPG engine)	✓	✓
	Inspect heated oxygen sensor (Exhaust gas sensor) (Except diesel engine)	✓	✓
	Inspect ignition wires (Except diesel engine)	✓	✓
	Replace air cleaner filter	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD engine)	✓	A,B,C,D
GASOLINE ENGINE	Adjust intake & exhaust valve clearance (Without catalyst, or TB engine except TB48DE)	✓	✓
	Inspect automatic temperature control air cleaner (Carburetor models)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace fuel filter (Except in-tank type fuel filter)	✓	A,E
	Inspect electrical fuel pump filter (L28 engine)	✓	✓
	Adjust ignition timing (Carburetor models)	✓	✓
	Inspect vacuum hoses & connections (Without catalyst)	✓	✓
	Inspect EGR control system (Without catalyst)	✓	✓
	Inspect EVAP vapor lines (With carbon canister)	✓	✓
	Replace engine oil at 40,000km/48months (For VQ turbocharged engine)	See NOTE (3)	✓
	Replace engine oil filter at 40,000km/48months (For VQ turbocharged engine)	See NOTE (3)	✓

		Normal	Severe
GASOLINE ENGINE	Inspect positive crankcase ventilation (PCV) system (VQ engine models & models without catalyst)	✓	✓
	Replace air induction valve filter	✓	A
	Replace PCV filter	✓	A
	Replace spark plugs (Conventional type only)	✓	✓
	Replace distributor breaker point (L28S engine)	✓	✓
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engine)	✓	✓
	Replace engine oil	✓	A,B,C,D
	Replace engine oil filter	✓	A,B,C,D
	Replace air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Replace fuel filter	✓	A,E
LPG ENGINE	Inspect idling speed (Except YD & ZD engine)	✓	✓
	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Adjust intake & exhaust valve clearance (Without catalyst, Except NA20P engine)	✓	✓
	Replace fuel filters	See NOTE (7)	A,E
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently.)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Replace spark plugs (Conventional type with catalyst)	✓	✓
	Inspect vacuum hoses & connections	✓	✓
Inspect EGR control system	✓	✓	

80,000km

48,000miles / 48months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Replace brake fluid	✓	F
	Inspect brake booster vacuum hoses, connections & check valve	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Replace N-CVT fluid	✓	C,H
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect N-CVT magnetic clutch carbon brushes	✓	✓
	Inspect Hyper-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks)	✓	✓
	Replace limited-slip differential (LSD) gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft	✓	G,H
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect free-running hub grease	✓	J
	Lubricate locks, hinges & hood latch (& Side door rollers and links)	✓	G
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
Replace ventilation air filter	✓	A	

		Normal	Severe
ALL VEHICLES	Replace automatic transmission fluid		C,H
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	
	Replace differential gear oil & viscous type LSD gear oil		C,H
	Replace power steering low-pressure hose at 70,000km/48months See NOTE (8)	✓	✓
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Tighten body mountings (D22, Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed model only) and body mountings	✓	✓
	Lubricate axle joint in knuckle flange (For Y61 models)	✓	✓
	Replace transfer & differential gear oil (For level and leaks)	✓	✓
	Replace all mode 4WD transfer fluid & differential gear oil (Except LSD) (For level & leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)	✓	G,H,J
	Replace front wheel bearing grease (4WD models)	✓	J
	Inspect front wheel bearing grease (4x2 models except E25 model)	✓	✓
Inspect steering damper (Commercial vehicles)	✓	✓	

Memo

Date / /	Mileage	Dealership Name	Service Advisor
------------------------	---------	-----------------	-----------------

85,000km

51,000miles / 51 months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo			
------	--	--	--

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

90,000km

54,000miles / 54months

54Months

90,000km

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace engine oil at 45,000km/54months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Replace engine oil filter at 45,000km/54months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Inspect spark plugs (Conventional type without catalyst)	✓	✓
	Inspect distributor breaker point (L28S engine)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Adjust ignition timing (No emission controlled engine) (Carburetor models)	✓	✓
DIESEL ENGINE	Replace engine oil (Except for D22, 2WD models with YD engine)	✓	A,B,C,D
	Replace engine oil (For D22, 2WD models with YD engine)		A,B,C,D
	Replace engine oil (For D22, 4WD or 4WD appearance 2WD models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD or ZD engine)	See NOTE (5)	A,B,C,D
	Inspect engine oil level (For D22 models with YD or ZD engine)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page 

M-41

90,000km

54,000miles / 54months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)	✓	G
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Australia models)		G
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation) (Except for Australia models)	✓	✓
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

95,000km

57,000miles / 57months

57Months

95,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

100,000km

60,000miles / 60months

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Inspect cooling system	✓	✓
	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Inspect drive belts (Except gasoline engine models with catalyst) See NOTE (1)	✓	✓
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace fuel filter (Except in-tank type filter)		A,E
GASOLINE ENGINE	Adjust intake & exhaust valve clearance (Without catalyst, or TB engine except TB48DE)	✓	✓
	Replace timing belt at 100,000Km	✓	✓
	Replace engine oil at 50,000km/60months (For VQ turbocharged engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter at 50,000km/60months (For VQ turbocharged engine) See NOTE (3)	✓	A,B,C,D
	Inspect positive crankcase ventilation (PCV) system (Without catalyst)	✓	✓
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Inspect automatic temperature control air cleaner (Carburetor models)	✓	✓
	Replace spark plugs (Conventional type without catalyst, for leaded fuel)	✓	✓
	Inspect spark plugs (Conventional type without catalyst, for unleaded fuel)	✓	✓
	Replace spark plugs at 100,000Km (Platinum-tipped type)	✓	✓
	Replace distributor breaker point (L28S engine)	✓	✓
	Adjust ignition timing (Carburetor models)	✓	✓
	Inspect vacuum hoses & connections (Without catalyst)	✓	✓
Inspect EGR control system (Without catalyst)	✓	✓	
Inspect carburetor idle rpm & mixture ratio See NOTE (2)	✓	✓	

		Normal	Severe
GASOLINE ENGINE	Replace air induction valve filter		A
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engine)	✓	✓
	Replace timing belt for camshaft & injection pump at 100,000Km	✓	✓
	Replace engine oil	✓	A,B,C,D
	Replace engine oil filter	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	
	Replace fuel filter & drain water		A,E
	Inspect idling speed (Except YD & ZD engine)	✓	✓
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Adjust intake & exhaust valve clearance (Without catalyst, Except NA20P engine)	✓	✓
	Inspect drive belts (Taxi use)	✓	✓
	Replace timing belt at 100,000Km	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently.)	✓	✓
	Replace spark plugs at 100,000Km (Iridium-tipped type or Platinum-tipped type)	✓	✓
	Adjust ignition timing	✓	✓
	Inspect vacuum hoses & connections	✓	✓
	Inspect EGR control system	✓	✓
	Replace catalyst at 100,000Km (Taxi use)	✓	✓

1 00,000km

60,000miles / 60months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Inspect free-running hub grease	✓	J
	Inspect limited-slip differential (LSD) gear oil (For level & leaks)	✓	
	Replace limited-slip differential (LSD) gear oil		C,H
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks)	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Replace N-CVT fluid		C,H
	Inspect Hyper-CVT fluid (For level & leaks) See NOTE (10)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Lubricate locks, hinges & hood latch (& Side door rollers and links)	✓	G
	Replace brake fluid		F
	Replace ventilation air filter	✓	A
Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft	✓	G,H	

		Normal	Severe
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect all mode 4WD transfer fluid & differential gear oil (Except LSD) (For level & leaks)	✓	✓
	Inspect front wheel bearing grease (4WD models)	✓	J
	Inspect steering damper (Commercial vehicles)	✓	✓
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)	✓	G,H,J
	Tighten body mountings (D22, Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed model only) and body mountings	✓	✓
	Replace manual transmission gear oil at 100,000km (Commercial vehicles)	✓	✓

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

105,000km

63,000miles / 63months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo			
------	--	--	--

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

110,000km

66,000miles / 66months

66Months

110,000km

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace engine oil at 55,000km/66months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Replace engine oil filter at 55,000km/66months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Inspect spark plugs (Conventional type without catalyst)	✓	✓
	Inspect distributor breaker point (L28S engine)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Adjust ignition timing (No emission controlled engine) (Carburetor models)	✓	✓
DIESEL ENGINE	Replace engine oil (Except for D22, 2WD models with YD engine)	✓	A,B,C,D
	Replace engine oil (For D22, 2WD models with YD engine)		A,B,C,D
	Replace engine oil (For D22, 4WD or 4WD appearance 2WD models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD or ZD engine)	See NOTE (5)	A,B,C,D
	Inspect engine oil level (For D22 models with YD or ZD engine)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page 

M-49

110,000km

66,000miles / 66months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)	✓	G
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Australia models)		G
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation) (Except for Australia models)	✓	✓
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

115,000km

69,000miles / 69months

69Months

115,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

1 20,000km

72,000miles / 72months

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Inspect cooling system	✓	✓
	Inspect drive belts	See NOTE (1)	✓
	Replace engine coolant (Use Nissan genuine engine coolant or equivalent in its quality)	See NOTE (6)	✓
	Inspect fuel lines (Except LPG engine)	✓	✓
	Inspect heated oxygen sensor (Exhaust gas sensor) (Except diesel engine)	✓	✓
	Inspect ignition wires (Except diesel engine)	✓	✓
	Replace air cleaner filter	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD engine)	✓	A,B,C,D
GASOLINE ENGINE	Adjust intake & exhaust valve clearance (Without catalyst, or TB engine except TB48DE)	✓	✓
	Inspect automatic temperature control air cleaner (Carburetor models)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace fuel filter (Except in-tank type fuel filter)	✓	A,E
	Inspect electrical fuel pump filter (L28 engine)	✓	✓
	Adjust ignition timing (Carburetor models)	✓	✓
	Inspect vacuum hoses & connections (Without catalyst)	✓	✓
	Inspect EGR control system (Without catalyst)	✓	✓
	Inspect EVAP vapor lines (With carbon canister)	✓	✓
	Replace engine oil at 60,000km/72months (For VQ turbocharged engine)	See NOTE (3)	✓
	Replace engine oil filter at 60,000km/72months (For VQ turbocharged engine)	See NOTE (3)	✓

		Normal	Severe	
GASOLINE ENGINE	Inspect positive crankcase ventilation (PCV) system (VQ engine models & models without catalyst)	✓	✓	
	Replace PCV filter	✓	A	
	Replace air induction valve filter	✓	A	
	Replace spark plugs (Conventional type only)	✓	✓	
	Replace distributor breaker point (L28S engine)	✓	✓	
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engine)	✓	✓	
	Replace engine oil	✓	A,B,C,D	
	Replace engine oil filter	✓	A,B,C,D	
	Replace air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A	
	Replace fuel filter	✓	A,E	
	Inspect idling speed (Except YD & ZD engine)	✓	✓	
LPG ENGINE	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓	
	Adjust intake & exhaust valve clearance (Without catalyst, Except NA20P engine)	✓	✓	
	Replace fuel filters	See NOTE (7)	✓	A,E
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently.)	✓	✓	
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓	
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓	
	Inspect positive crankcase ventilation (PCV) system	✓	✓	
	Replace spark plugs (Conventional type with catalyst)	✓	✓	
	Inspect vacuum hoses & connections	✓	✓	
	Inspect EGR control system	✓	✓	

1 20,000km

72,000miles / 72months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Replace brake fluid	✓	F
	Inspect brake booster vacuum hoses, connections & check valve	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Replace N-CVT fluid	✓	C,H
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect N-CVT magnetic clutch carbon brushes	✓	✓
	Replace Hyper-CVT fluid at 120,000km (For level & leaks) See NOTE (10)	✓	✓
	Inspect manual transmission gear oil (For level & leaks)	✓	✓
	Replace limited-slip differential (LSD) gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft	✓	G,H
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Lubricate locks, hinges & hood latch (& Side door rollers and links)	✓	G
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Replace ventilation air filter	✓	A
	Replace automatic transmission fluid		C,H

		Normal	Severe
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	
	Replace differential gear oil & viscous type LSD gear oil		C,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Tighten body mountings (D22, Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed model only) and body mountings	✓	✓
	Lubricate axle joint in knuckle flange (For Y61 model)	✓	✓
	Inspect free-running hub grease	✓	J
	Replace transfer & differential gear oil (For level and leaks)	✓	✓
	Inspect all mode 4WD transfer fluid & differential gear oil (Except LSD) (For level & leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)	✓	G,H,J
	Replace front wheel bearing grease (4WD models)	✓	J
	Inspect front wheel bearing grease (4x2 models except E25 model)	✓	✓
	Inspect steering damper (Commercial vehicles)	✓	✓

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

1 25,000km

75,000miles / 75months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

130,000km

78,000miles / 78months

78Months

130,000km

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace engine oil at 65,000km/78months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Replace engine oil filter at 65,000km/78months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Inspect spark plugs (Conventional type without catalyst)	✓	✓
	Inspect distributor breaker point (L28S engine)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Adjust ignition timing (No emission controlled engine) (Carburetor models)	✓	✓
DIESEL ENGINE	Replace engine oil (Except for D22, 2WD models with YD engine)	✓	A,B,C,D
	Replace engine oil (For D22, 2WD models with YD engine)		A,B,C,D
	Replace engine oil (For D22, 4WD or 4WD appearance 2WD models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD or ZD engine)	See NOTE (5)	A,B,C,D
	Inspect engine oil level (For D22 models with YD or ZD engine)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page 

M-57

130,000km

78,000miles / 78months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)	✓	G
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Australia models)		G
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation) (Except for Australia models)	✓	✓
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

135,000km

81,000miles / 81 months

81Months

135,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)		A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D

CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

1 40,000km

84,000miles / 84months

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Inspect cooling system	✓	✓
	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Inspect drive belts (Except gasoline engine models with catalyst) See NOTE (1)	✓	✓
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace fuel filter (Except in-tank type filter)		A,E
GASOLINE ENGINE	Adjust intake & exhaust valve clearance (Without catalyst, or TB engine except TB48DE)	✓	✓
	Replace engine oil at 70,000km/84months (For VQ turbocharged engine) See NOTE (3)	✓	A,B,C,D
	Replace engine oil filter at 70,000km/84months (For VQ turbocharged engine) See NOTE (3)	✓	A,B,C,D
	Inspect positive crankcase ventilation (PCV) system (Without catalyst)	✓	✓
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Inspect automatic temperature control air cleaner (Carburetor models)	✓	✓
	Replace spark plugs (Conventional type without catalyst, for leaded fuel)	✓	✓
	Inspect spark plugs (Conventional type without catalyst, for unleaded fuel)	✓	✓
	Replace distributor breaker point (L28S engine)	✓	✓
	Adjust ignition timing (Carburetor models)	✓	✓
	Inspect vacuum hoses & connections (Without catalyst)	✓	✓
	Inspect EGR control system (Without catalyst)	✓	✓
	Inspect carburetor idle rpm & mixture ratio See NOTE (2)	✓	✓
	Replace air induction valve filter		A

		Normal	Severe
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engine)	✓	✓
	Replace engine oil	✓	A,B,C,D
	Replace engine oil filter	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	
	Replace fuel filter & drain water		A,E
	Inspect idling speed (Except YD & ZD engine)	✓	✓
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓
	Adjust intake & exhaust valve clearance (Without catalyst, Except NA20P engine)	✓	✓
	Inspect drive belts (Taxi use)	✓	✓
	Inspect positive crankcase ventilation (PCV) system	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently.)	✓	✓
	Adjust ignition timing	✓	✓
	Inspect vacuum hoses & connections	✓	✓
	Inspect EGR control system	✓	✓

140,000km

84,000miles / 84months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓
	Inspect free-running hub grease	✓	J
	Inspect limited-slip differential (LSD) gear oil (For level & leaks)	✓	
	Replace limited-slip differential (LSD) gear oil		C,H
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks)	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Replace N-CVT fluid		C,H
	Inspect Hyper-CVT fluid (For level & leaks) See NOTE (10)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Lubricate locks, hinges & hood latch (& Side door rollers and links)	✓	G
	Replace brake fluid		F
	Replace ventilation air filter	✓	A
Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft	✓	G,H	
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H

		Normal	Severe
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect all mode 4WD transfer fluid & differential gear oil (Except LSD) (For level & leaks)	✓	✓
	Inspect front wheel bearing grease (4WD models)	✓	J
	Inspect steering damper (Commercial vehicles)	✓	✓
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)	✓	G,H,J
	Tighten body mountings (D22, Y61 – small size frame models)	✓	✓
	Tighten rear body bolts & nuts (Wooden bed model only) and body mountings	✓	✓

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

145,000km

87,000miles / 87months

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

150,000km

90,000miles / 90months

90Months

150,000km

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Clean air cleaner filter (Dry paper type)	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD diesel engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD diesel engine)	✓	A,B,C,D
GASOLINE ENGINE	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace engine oil at 75,000km/90months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Replace engine oil filter at 75,000km/90months (For VQ turbocharged engine)	See NOTE (3)	A,B,C,D
	Inspect spark plugs (Conventional type without catalyst)	✓	✓
	Inspect distributor breaker point (L28S engine)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Adjust ignition timing (No emission controlled engine) (Carburetor models)	✓	✓
DIESEL ENGINE	Replace engine oil (Except for D22, 2WD models with YD engine)	✓	A,B,C,D
	Replace engine oil (For D22, 2WD models with YD engine)		A,B,C,D
	Replace engine oil (For D22, 4WD or 4WD appearance 2WD models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Except for D22 models with YD or ZD engine)	✓	A,B,C,D
	Replace engine oil filter (For D22 models with YD or ZD engine)	See NOTE (5)	A,B,C,D
	Inspect engine oil level (For D22 models with YD or ZD engine)	✓	A,B,C,D
	Clean air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A
	Check fuel filter & drain water	✓	A,E
LPG ENGINE	Inspect air cleaner filter (Viscous paper type) (Taxi use)	✓	A
	Inspect drive belts (Taxi use)	✓	✓
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

Continue Next Page 

M-65

150,000km

90,000miles / 90months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks) (Except for Australia models)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)	✓	G
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Australia models)		G
	Inspect foot brake, parking brake & clutch (For free play, stroke & operation) (Except for Australia models)	✓	✓
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft		G,H
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G
	Inspect transfer & differential gear oil (For level and leaks)	✓	✓
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft	✓	G,H
	Lubricate propeller shaft grease (4WD commercial vehicles) See NOTE (9)		G,H,J
	Inspect front wheel bearing grease (4WD models)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

155,000km

93,000miles / 93months

93Months

155,000km

		Normal	Severe
ENGINE MAINTENANCE			
GASOLINE ENGINE	Replace engine oil (Use recommended oil)		A,B,C,D
	Replace engine oil filter (Use recommended filter)		A,B,C,D
DIESEL ENGINE	Replace engine oil (Use recommended oil) (For indirect injection engine)	✓	A,B,C,D
	Replace engine oil (For Y61, D22 ZD engine models and D22, 4WD or 4WD appearance 2WD models with YD engine)		A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except for D22 models with YD or ZD engine)		A,B,C,D
	Inspect engine oil level (For Y61, ZD engine models and D22 models with YD or ZD engine)	✓	A,B,C,D
LPG ENGINE	Replace engine oil (Use API SE, SF, SG, SH or SJ oil, or LPG exclusive oil)		A,B,C,D
	Replace engine oil filter		A,B,C,D
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake pads, rotors & other brake components		A,C,G,H,I
	Inspect free-running hub grease		J
	Lubricate locks, hinges & hood latch (& Side door rollers and links) (Except for Australia models)		G
4WD MODEL & COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)		G
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & front drive shaft		G,H
	Inspect front wheel bearing grease (4WD models only)		J

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

NOTE and Severe driving conditions: See page M-72 Inspect: Inspect and correct, or replace as necessary.

1 60,000km

96,000miles / 96months

		Normal	Severe
ENGINE MAINTENANCE			
ALL ENGINES	Inspect cooling system	✓	✓
	Inspect drive belts	See NOTE (1)	✓
	Replace engine coolant (Use Nissan genuine engine coolant or equivalent in its quality)	See NOTE (6)	✓
	Inspect fuel lines (Except LPG engine)	✓	✓
	Inspect heated oxygen sensor (Exhaust gas sensor) (Except diesel engine)	✓	✓
	Inspect ignition wires (Except diesel engine)	✓	✓
	Replace air cleaner filter	✓	A
	Inspect cyclone pre-air cleaner (Except LPG engine)	✓	A
	Replace engine oil (Use recommended oil) (Except YD & ZD engine)	✓	A,B,C,D
	Replace engine oil filter (Use recommended filter) (Except YD & ZD engine)	✓	A,B,C,D
GASOLINE ENGINE	Adjust intake & exhaust valve clearance (Without catalyst, or TB engine except TB48DE)	✓	✓
	Inspect automatic temperature control air cleaner (Carburetor models)	✓	✓
	Inspect carburetor idle rpm & mixture ratio	See NOTE (2)	✓
	Inspect cooling fan fluid & lines (For level & leaks, Q45 models except for the Middle East)	✓	✓
	Replace fuel filter (Except in-tank type fuel filter)	✓	A,E
	Inspect electrical fuel pump filter (L28 engine)	✓	✓
	Adjust ignition timing (Carburetor models)	✓	✓
	Inspect vacuum hoses & connections (Without catalyst)	✓	✓
	Inspect EGR control system (Without catalyst)	✓	✓
	Inspect EVAP vapor lines (With carbon canister)	✓	✓
	Replace engine oil at 80,000km/96months (For VQ turbocharged engine)	See NOTE (3)	✓
	Replace engine oil filter at 80,000km/96months (For VQ turbocharged engine)	See NOTE (3)	✓

		Normal	Severe	
GASOLINE ENGINE	Inspect positive crankcase ventilation (PCV) system (VQ engine models & models without catalyst)	✓	✓	
	Replace air induction valve filter	✓	A	
	Replace PCV filter	✓	A	
	Replace spark plugs (Conventional type only)	✓	✓	
	Replace distributor breaker point (L28S engine)	✓	✓	
DIESEL ENGINE	Adjust intake & exhaust valve clearance (Without HLA, Except YD & ZD engine)	✓	✓	
	Replace engine oil	✓	A,B,C,D	
	Replace engine oil filter	✓	A,B,C,D	
	Replace air cleaner filter including pre-air cleaner filter (Dry paper type)	✓	A	
	Replace fuel filter	✓	A,E	
	Inspect idling speed (Except YD & ZD engine)	✓	✓	
LPG ENGINE	Inspect torque of manifolds & exhaust tube nuts & cylinder head fixing nuts	✓	✓	
	Adjust intake & exhaust valve clearance (Without catalyst, Except NA20P engine)	✓	✓	
	Replace fuel filters	See NOTE (7)	✓	A,E
	Drain vaporizer tar (If large quantity of tar is drained, drain tar more frequently.)	✓	✓	
	Inspect LPG cylinder & container connections (For loose connections & damage)	✓	✓	
	Inspect LPG fuel pipes, connections (For gas leaks & damage)	✓	✓	
	Inspect positive crankcase ventilation (PCV) system	✓	✓	
	Replace spark plugs (Conventional type with catalyst)	✓	✓	
	Inspect vacuum hoses & connections	✓	✓	
	Inspect EGR control system	✓	✓	

1 60,000km

96,000miles / 96months

		Normal	Severe
CHASSIS AND BODY MAINTENANCE			
ALL VEHICLES	Inspect brake, clutch & automatic transmission fluid (For level & leaks)	✓	✓
	Replace brake fluid	✓	F
	Inspect brake booster vacuum hoses, connections & check valve	✓	✓
	Inspect manual steering gear oil (RB type, For level & leaks)	✓	✓
	Inspect power steering fluid & lines (For level & leaks)	✓	✓
	Inspect brake, clutch & exhaust systems	✓	✓
	Replace N-CVT fluid	✓	C,H
	Inspect N-CVT fluid (For level & leaks)	✓	✓
	Inspect N-CVT magnetic clutch carbon brushes	✓	✓
	Inspect Hyper-CVT fluid (For level & leaks)	✓	✓
	Inspect manual transmission gear oil (For level & leaks)	✓	✓
	Replace limited-slip differential (LSD) gear oil (For level & leaks)	✓	C,H
	Inspect steering gear (box) & linkage, axle & suspension parts, propeller shafts & (front) drive shaft	✓	G,H
	Inspect Automatic Speed Control Device (ASCD) vacuum hoses	✓	✓
	Inspect wheel alignment (If necessary, rotate & balance wheels)	✓	✓
	Inspect brake pads, rotors & other brake components	✓	A,C,G,H,I
	Inspect brake linings, drums & other brake components	✓	A,C,G,H,I
	Inspect free-running hub grease	✓	J
	Lubricate locks, hinges & hood latch (& Side door rollers and links)	✓	G
	Inspect seat belts, buckles, retractors, anchors & adjuster	✓	✓
Inspect foot brake, parking brake & clutch (For free play, stroke & operation)	✓	✓	
Replace ventilation air filter	✓	A	

		Normal	Severe	
ALL VEHICLES	Replace automatic transmission fluid		C,H	
PASSENGER 2WD MODEL	Inspect differential gear oil & viscous type LSD gear oil (For level & leaks)	✓		
	Replace differential gear oil & viscous type LSD gear oil		C,H	
	Replace power steering low-pressure hose at 140,000km/96months	See NOTE (8)	✓	✓
4WD MODEL AND COMMERCIAL VEHICLE	Lubricate nipples of kingpins (W41 model only)	✓	G	
	Tighten body mountings (D22, Y61 – small size frame models)	✓	✓	
	Tighten rear body bolts & nuts (Wooden bed model only) and body mountings	✓	✓	
	Lubricate axle joint in knuckle flange (For Y61 models)	✓	✓	
	Replace transfer & differential gear oil (For level and leaks)	✓	✓	
	Replace all mode 4WD transfer fluid & differential gear oil (Except LSD) (For level & leaks)	✓	✓	
	Lubricate propeller shaft grease (4WD commercial vehicles)	See NOTE (9)	✓	G,H,J
	Replace front wheel bearing grease (4WD models)	✓	J	
	Inspect front wheel bearing grease (4x2 models except E25 model)	✓	✓	
Inspect steering damper (Commercial vehicles)	✓	✓		

Memo

Date / /	Mileage	Dealership Name	Service Advisor
----------	---------	-----------------	-----------------

NOTE : Maintenance items

- (1) Replace the drive belts if found damaged or if the auto belt tensioner reading reaches the maximum limit. (If auto belt tensioner is equipped)
- (2) Check mixture ratio only on models bound for areas affected by emission regulations.
- (3) For VQ turbocharged engine with Japanese domestic specifications.
- (4) Except passenger models with catalyst.
- (5) Use Eco filter or equivalent.
- (6) Use Nissan genuine engine coolant, or equivalent in its quality, in order to avoid possible aluminum corrosion within the engine cooling system caused by the use of non-genuine engine coolant. After first replacement, replace every 40,000 Km (24,000 miles) or 24 months.
- (7) Fuel filter are located in LPG solenoid unit 1 and LPG solenoid unit 2 respectively.
- (8) U14 models for South Asia
- (9) The propeller shaft should be re-greased after being immersed in water.
- (10) Use Nissan genuine Hyper-CVT fluid (NS-1) or exact equivalent.

Severe driving conditions

The maintenance intervals shown on the preceding pages are for normal operating conditions.

If the vehicle is mainly operated under severe driving conditions as shown below, more frequent maintenance must be performed on the following items as shown in the table.

- (A) Driving in dusty conditions
- (B) Repeatedly driving short distances
- (C) Towing a trailer or caravan

- (D) Extensive idling
- (E) Driving in extremely adverse weather conditions or in areas where ambient temperatures are either extremely low or extremely high
- (F) Driving in high humidity or mountainous areas
- (G) Driving in areas which are high in salt or other corrosive materials
- (H) Driving on rough and/or muddy roads or in the desert
- (I) Driving with frequent use of brakes
- (J) Frequent driving in water

Maintenance for off-road driving

Whenever you drive off-road through sand, mud or water as deep as the wheel hub, more frequent maintenance may be required of the following items:(For commercial vehicles)

Whenever you drive off-road through sand, mud or water, more frequent maintenance may be required of the following items:(For passenger vehicles)

- ▲ Brake pads and rotors
- ▲ Brake lining and drums
- ▲ Brake lines and hoses
- ▲ Wheel bearing grease
- ▲ Free-running hub grease
- ▲ Differential, transfer gear oil and automatic transmission fluid
- ▲ Differential, all-mode 4WD transfer fluid and automatic transmission fluid
- ▲ Steering linkage
- ▲ Propeller shaft and front drive shafts
- ▲ Air cleaner filter
- ▲ Clutch housing (Check water entry.)